


Runner installation instruction

- 1. To prevent the runner being accidentally dislodged, bend the lug upwards. This holds / locks the runner into the frame.
- 2. Depress the lug to remove.

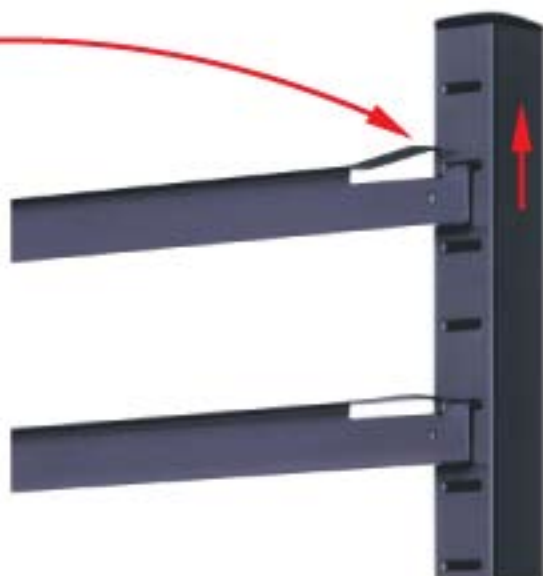

Gratnells